



Wand Kit

Installation Instructions



www.bulldogscrubbers.com
877-292-3935

Bulldog WD20 Wand Kit Installation



Parts



- 1- Pump**
- 2- Replacement Bolt (828370)**
- 3- Washers (711594)**
- 4- Brass Quick Disconnect**
- 5- Hose Filter (342444)**
- 6- Switch (748146)**
- 7- Bag of Wire-Ties (828062-B)**

Steps

- 1- Empty Recovery Tank**
- 2- Disconnect Battery Cables**

Bulldog WD20 Wand Kit Installation



Steps Cont.

3- Cut Wire-Tie (zip-tie) on Wires to the right of the brush motor.

(New ones will be installed later)




4- Cut Wire Tie on Wand hose under Scrubber.

(New ones will be installed later)



5- Pull Hose through opening on the right. (If white cap on (remove) in-order to slide through. Reattach the clamp and bolts and make sure they are snug

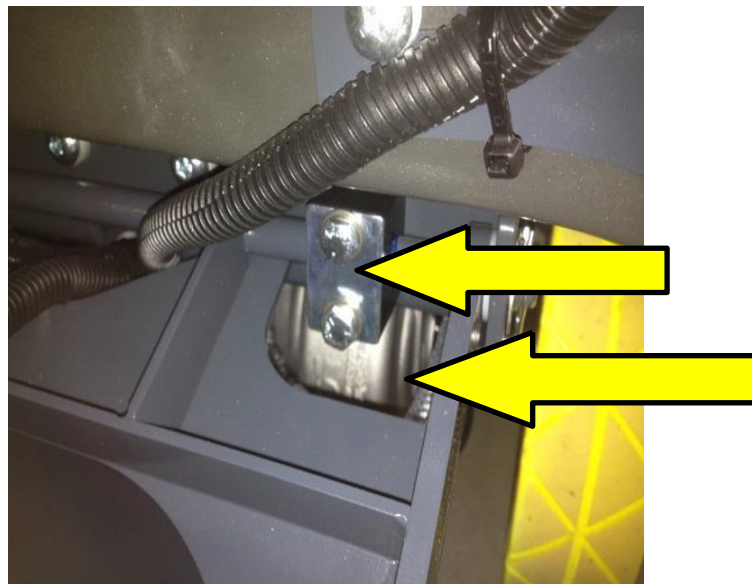


Bulldog WD20 Wand Kit Installation



Steps Cont.

6- Install pump on grey cross bar and put new replacement bolt (828370) through the hole shown below. Attach recovery tank retention cable and tighten bolt.

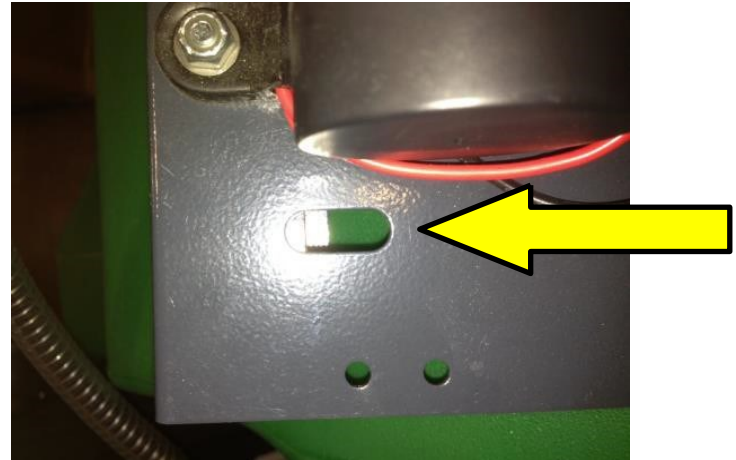

7- Attach the pump hose to the hose which was put through opening in step 3. Use hose filter (Part 5 342444).

8- Remove the two black plastic plugs shown on right.



Bulldog WD20 Wand Kit Installation




Steps Cont.

9– Attach Quick Disconnect (Part 4) in bottom hole placing 3 washers behind the plate w/one washer in front. Attach water line to quick disconnect.




10– Put Switch (Part 6/748146) through the top opening and tighten

(Make sure On position is facing Up)

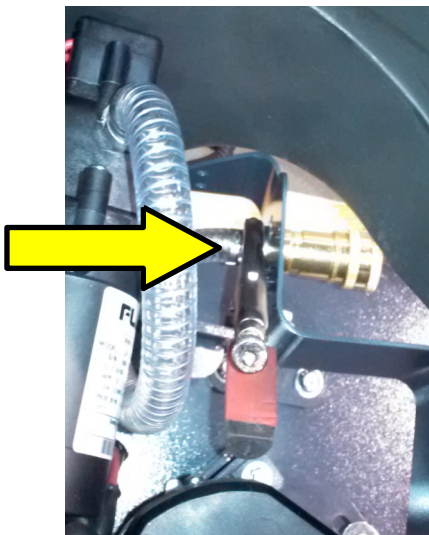

Use vise grips to hold fitting on water line behind plate when tightening

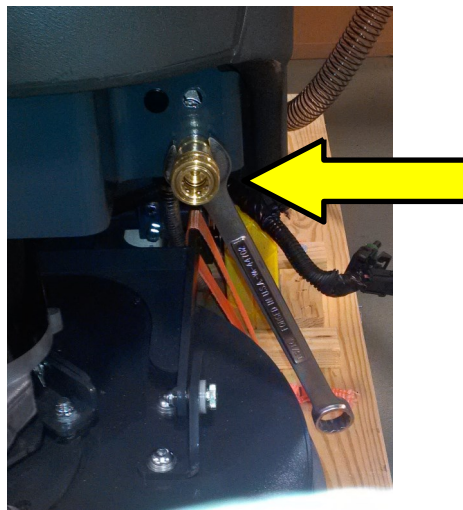

Use 13/16 wrench on outside.



Bulldog WD20 Wand Kit Installation



Steps Cont.



11– Connect Red & Black Pump wire to Purple & Black wire on Bulldog, Connect remaining 2 wire harness to from switch to Bulldog



12– Using Wire Ties (Part 7) Attach wires to frame of machine for support (these will replace the ones you removed in steps 3 & 4)

13– Install Wand Head to Wand by Pushing on.

14–Using Wrench, Attach wand handle at appropriate height. *(Do not pinch black water line)*

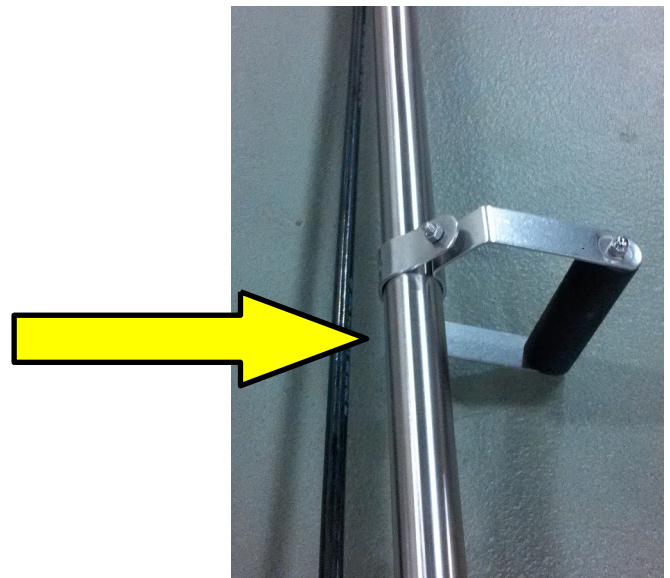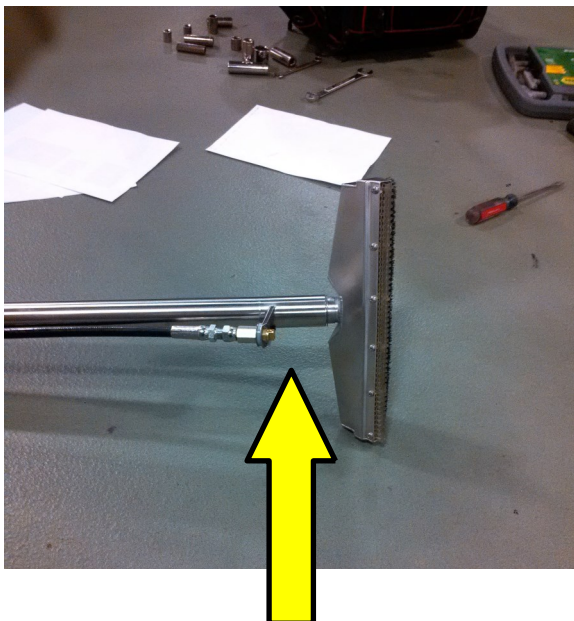

Bulldog WD20 Wand Kit Installation



Steps Cont.

15– Install White Fitting to Squeegee Hose to connect to Wand.



16– Install Quick connect fittings to each end of the wand hose use Teflon Tape on threads (Not Provided) Use 3/4 & 9/16 wrench



17– Connect all hoses to appropriate locations.

18– Reconnect Battery

19– Enjoy —Any Questions please call

800-793-3790

